




Critical Wear Areas & Vacuum Test Locations

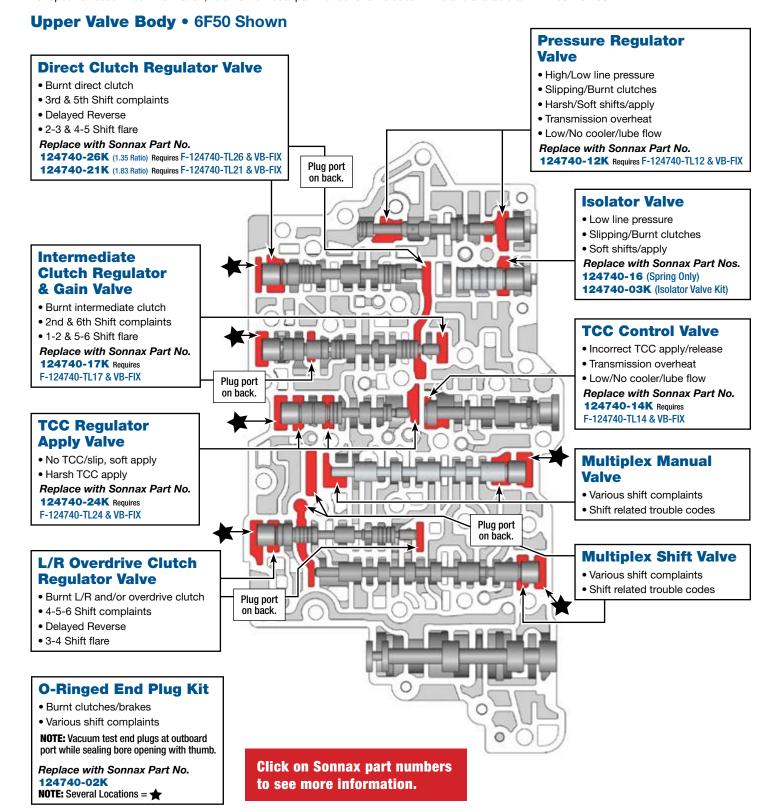

NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts noted for replacement. For specific vacuum test information, refer to individual part instructions included in kits and available at **www.sonnax.com**.



©2014 Sonnax Industries, Inc. 6F50-Vac Test Locations 11-06-14






Critical Wear Areas & Vacuum Test Locations

NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear and Sonnax parts noted for replacement. For specific vacuum test information, refer to individual part instructions included in kits and available at **www.sonnax.com**.


Lower Valve Body • 6F50 Shown

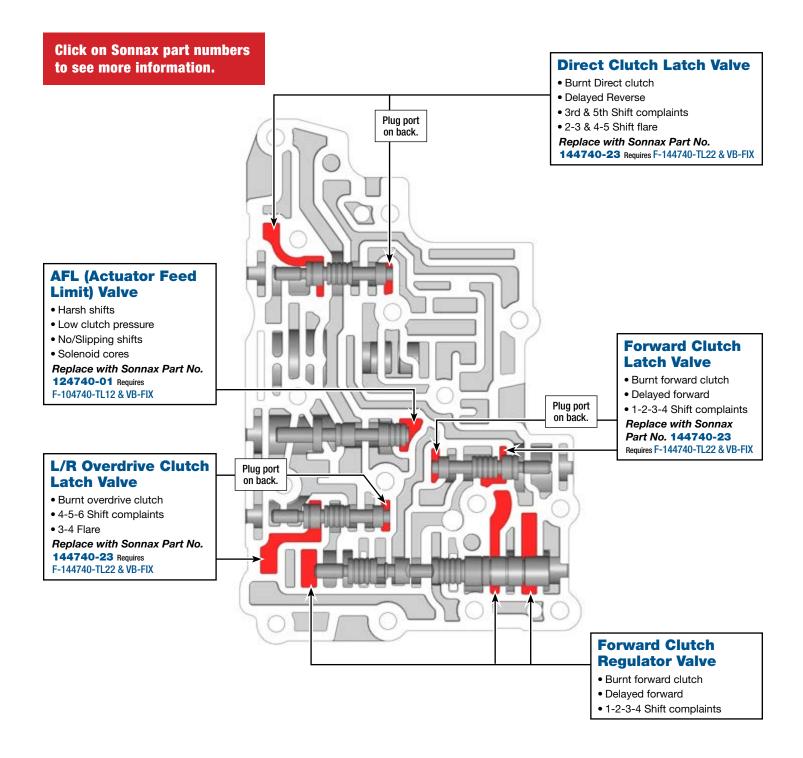



OE Exploded View

Upper Valve Body • 6F50 Shown

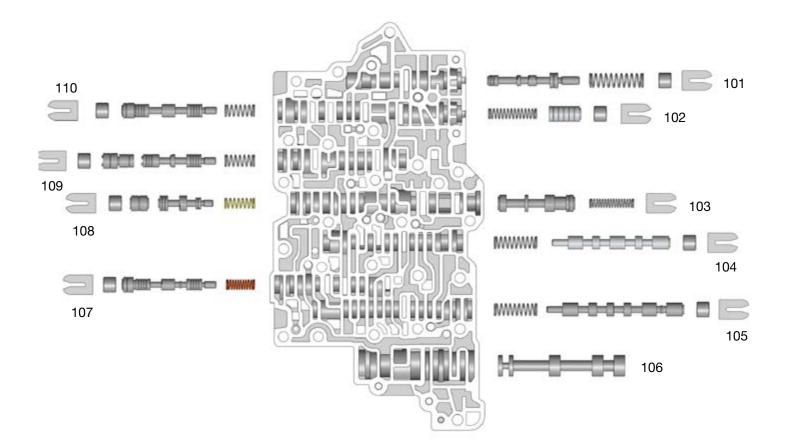

Upper Valve Body Descriptions		
I.D. No.	6F50 Description	
101	Pressure Regulator Valve	
102	Isolator Valve	
103	TCC Control Valve	
104	Multiplex Manual Valve	
105	Multiplex Shift Valve	
106	Manual Valve	
107	L/R Overdrive Clutch Regulator Valve	
108	TCC Regulator Apply Valve	
109	Intermediate Clutch Regulator & Gain Valve	
110	Direct Clutch Regulator Valve	


©2014 Sonnax Industries, Inc. 6F50-Vac Test Locations 11-06-14





OE Exploded View

Lower Valve Body • 6F50 Shown

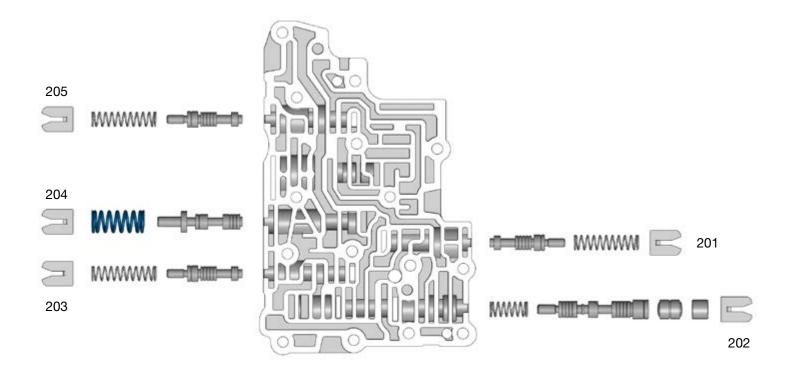

Lower Valve Body Descriptions		
I.D. No.	6F50 Description	
201	Forward Clutch Latch Valve	
202	Forward Clutch Regulator Valve	
203	L/R Overdrive Clutch Latch Valve	
204	AFL (Actuator Feed Limit) Valve	
205	Direct Clutch Latch Valve	

©2014 Sonnax Industries, Inc. 6F50-Vac Test Locations 11-06-14