


Critical Wear Areas & Vacuum Test Locations



NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear.

Upper Valve Body • U760E Shown

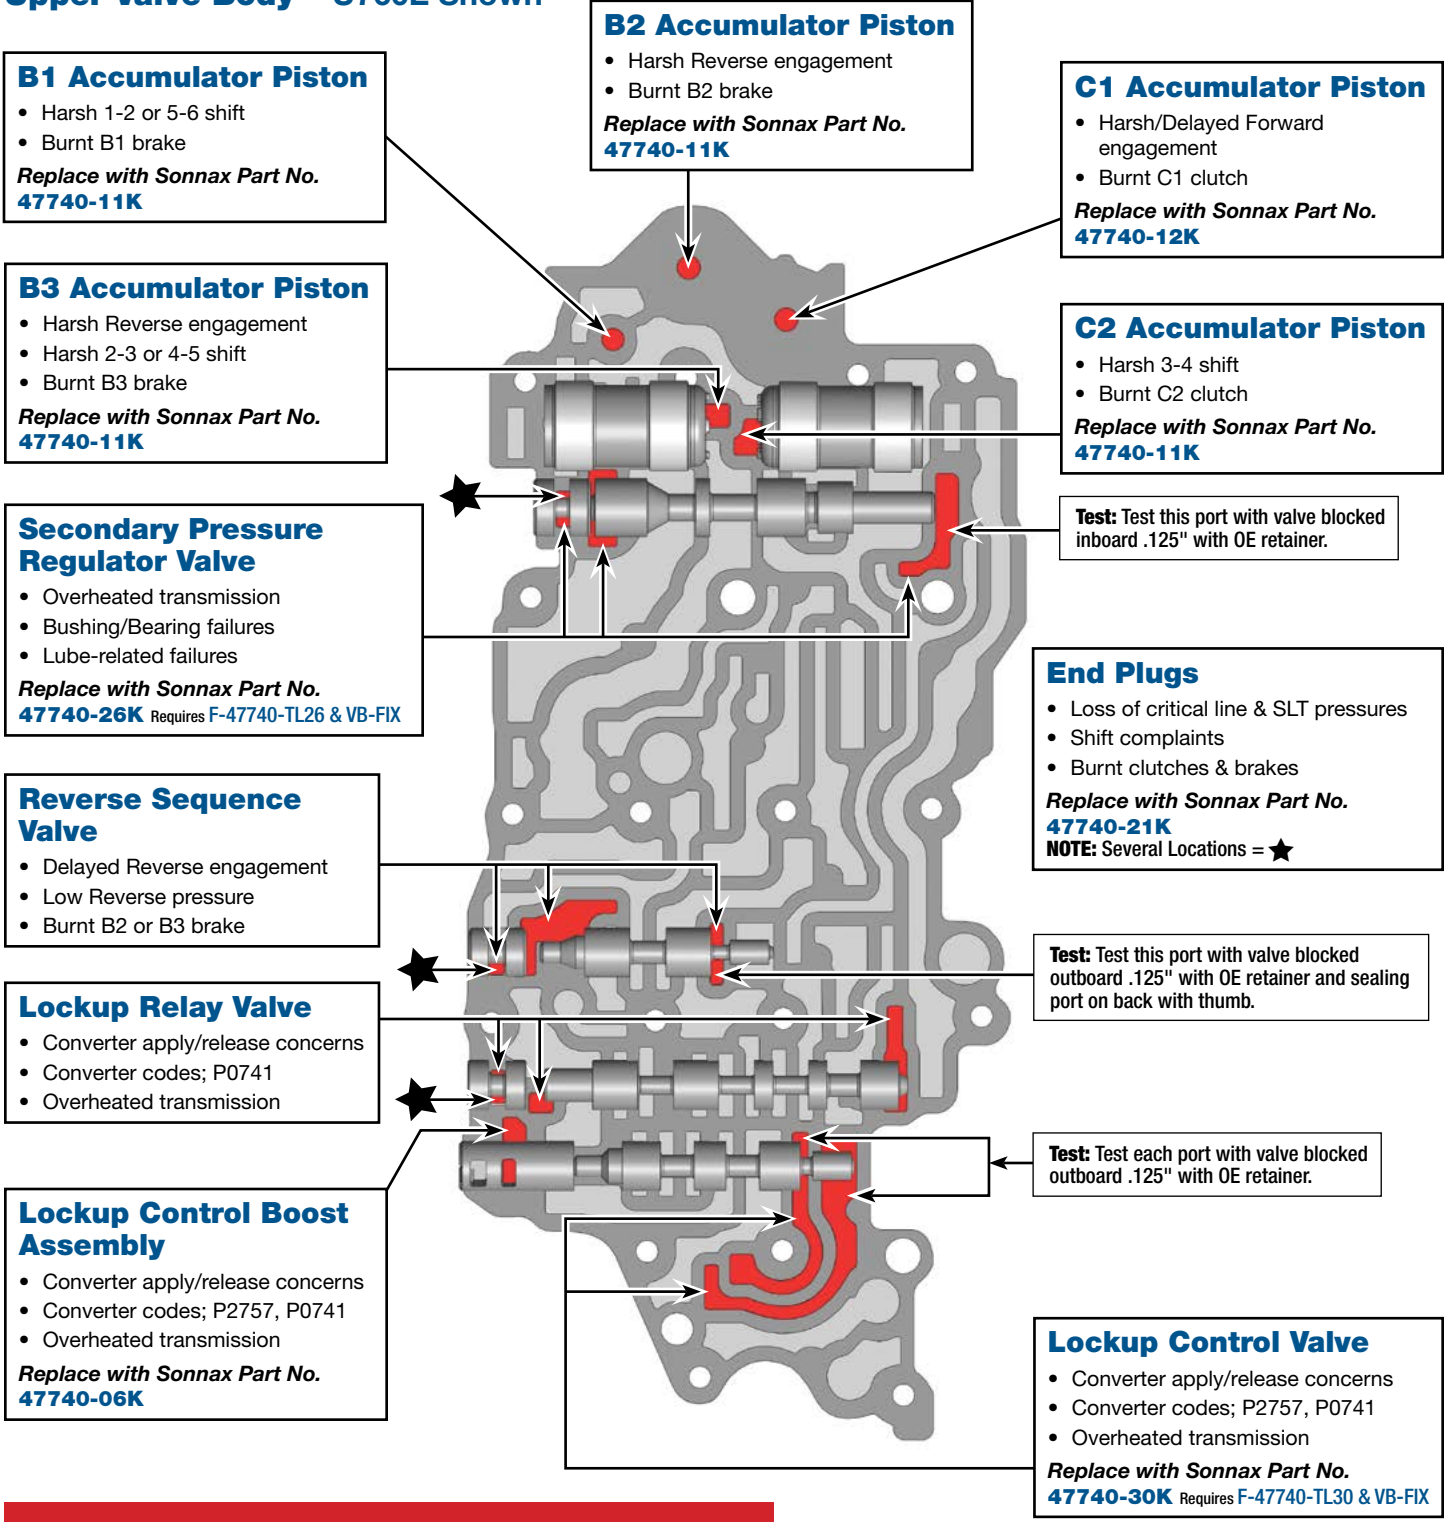

Click on Sonnax part numbers to see more information.


Critical Wear Areas & Vacuum Test Locations




NOTE: OE valves are shown in rest position and should be tested in rest position unless otherwise indicated. Test locations are pointed to with an arrow. Springs are not shown for visual clarity. Low vacuum reading indicates wear.

Click on Sonnax part numbers to see more information.

Middle Valve Body – Lower Side U760E Shown

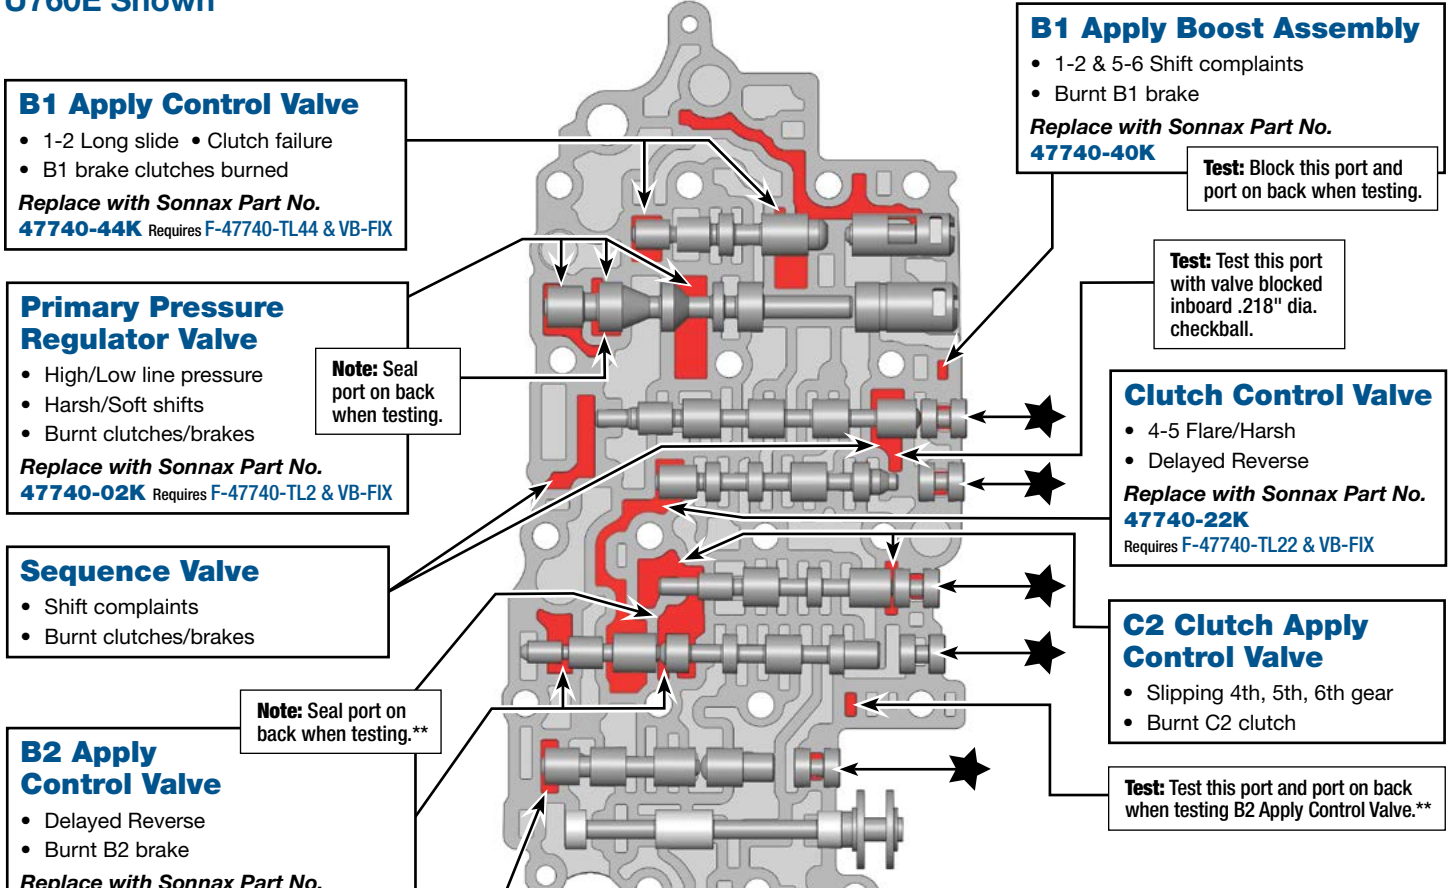

Middle Valve Body – Back Side U760E Shown

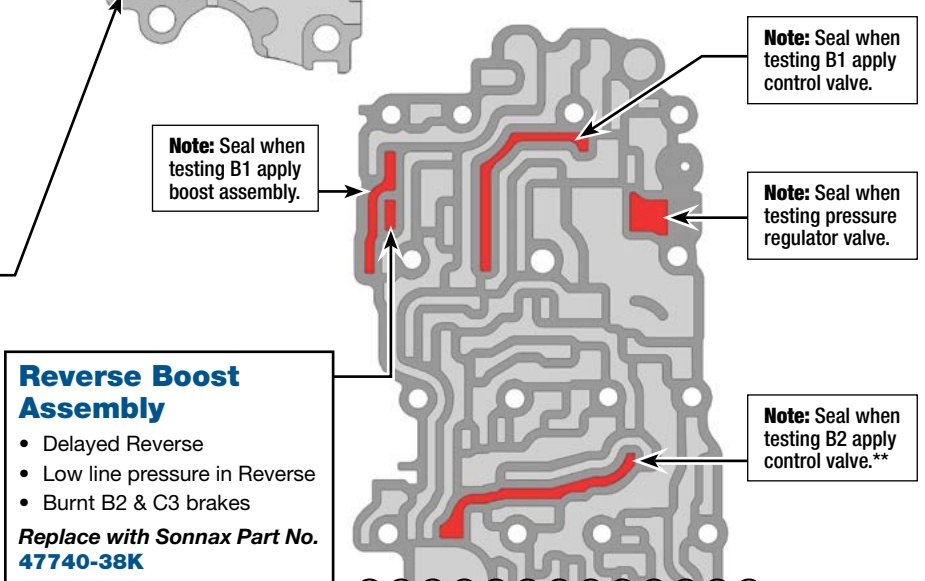


** These two passages are connected. The mat will provide the seal for the Middle Valve Body, Upper side. The passage indicated (**) will also need to be sealed to Vacuum test the circuit.

OE Exploded View

Upper Valve Body • U760E Shown

NOTE: Depending upon vehicle application, the OE springs shown may not be present.

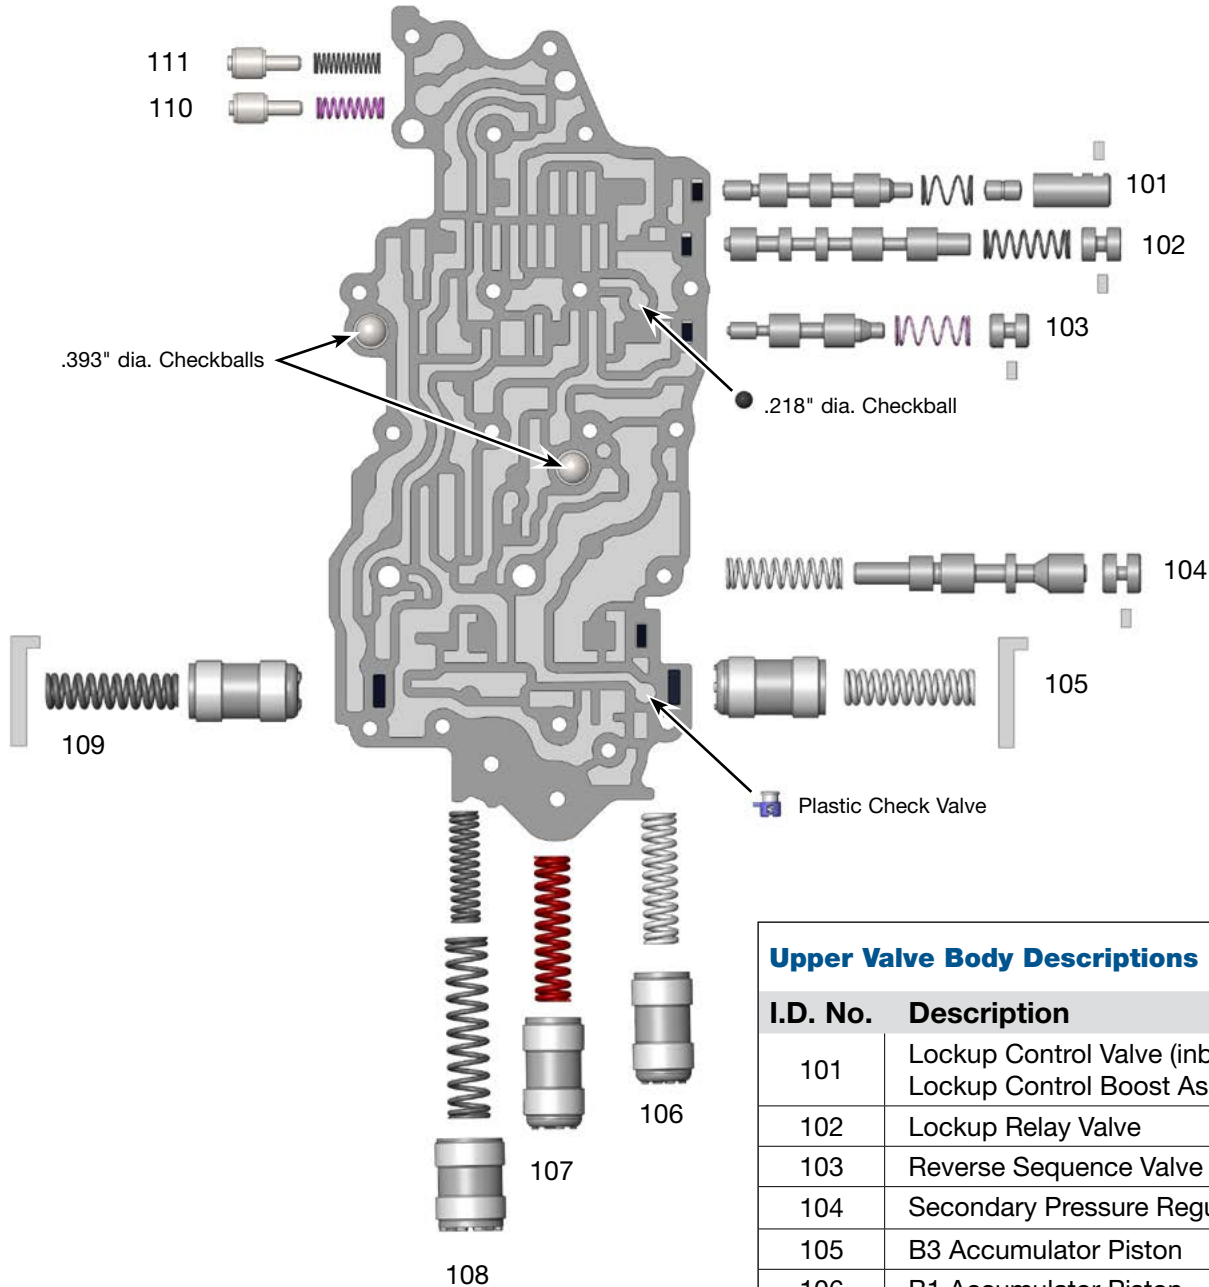


Upper Valve Body Descriptions	
I.D. No.	Description
101	Lockup Control Valve (inboard) Lockup Control Boost Assembly (outboard)
102	Lockup Relay Valve
103	Reverse Sequence Valve
104	Secondary Pressure Regulator Valve
105	B3 Accumulator Piston
106	B1 Accumulator Piston
107	B2 Accumulator Piston
108	C1 Accumulator Piston
109	C2 Accumulator Piston
110	Lube Relief Check Valve
111	Converter Relief Check Valve

OE Exploded View

Middle Valve Body • U760E Shown

NOTE: Depending upon vehicle application, the OE springs shown may not be present.

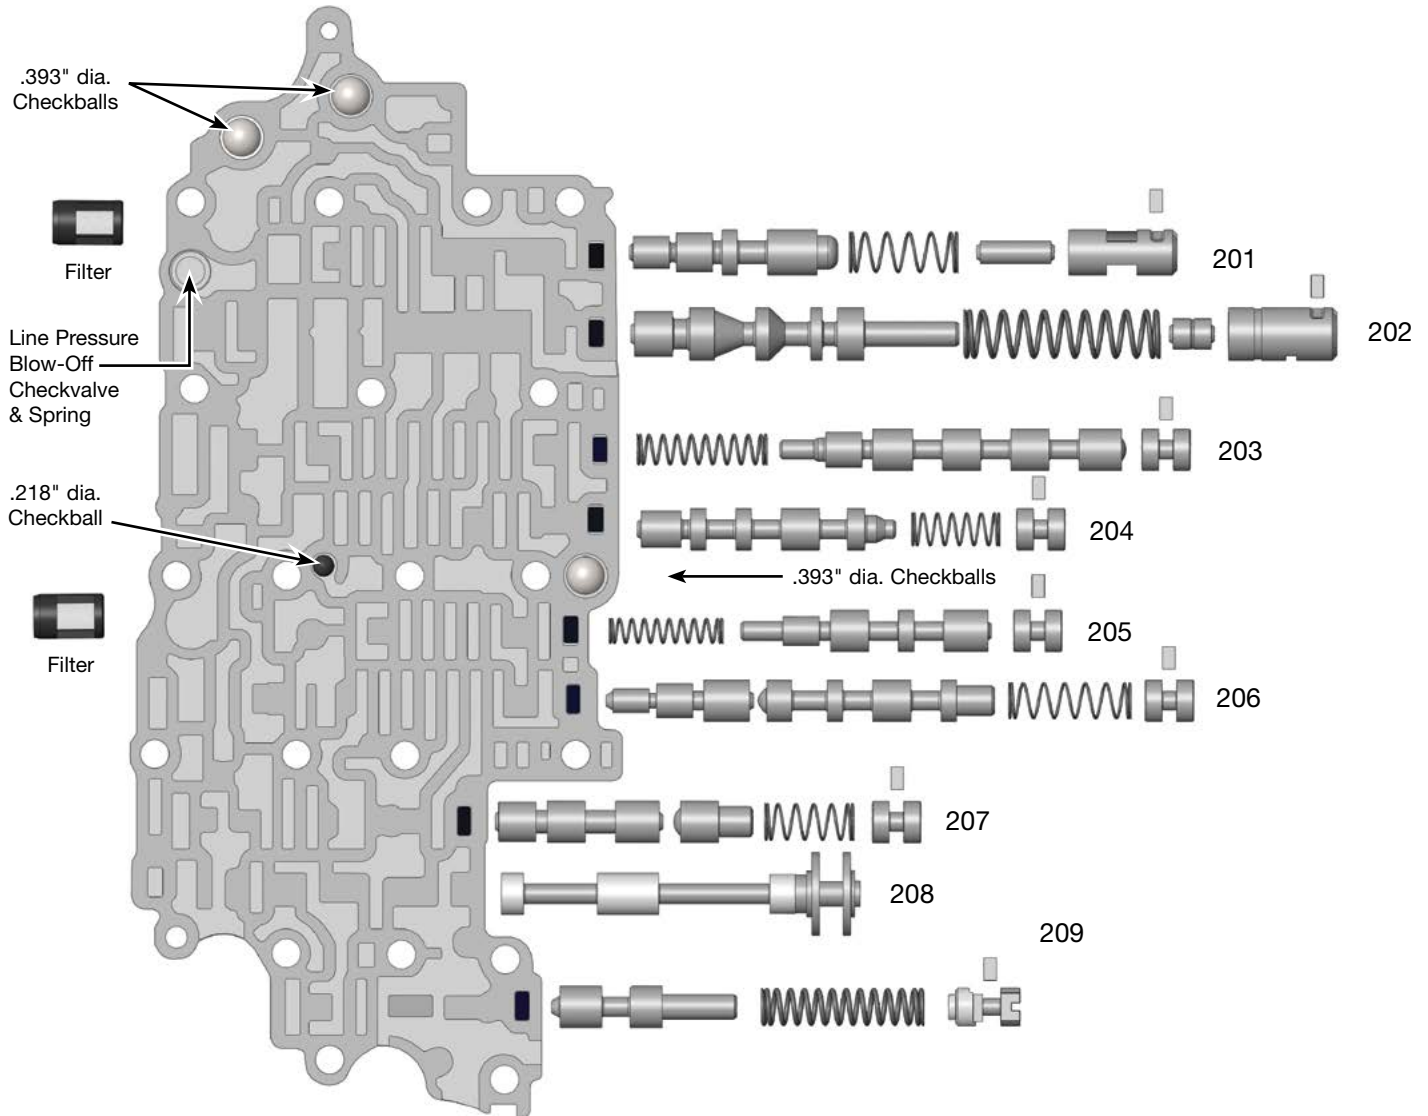

Middle Valve Body Descriptions	
ID No.	Description
201	B1 Apply Control Valve (inboard) B1 Apply Boost Assembly (outboard)
202	Primary Pressure Regulator Valve (inboard) Reverse Boost Assembly (outboard)
203	Sequence Valve
204	Clutch Control Valve
205	C2 Clutch Apply Control Valve

Middle Valve Body Descriptions	
ID No.	Description
206	B2 Apply Control Relay Valve (inboard) B2 Apply Control Valve (outboard)
207	B2 Control Valve (inboard) B2 Control Relay Valve (outboard)
208	Manual Valve
209	Solenoid Modulator Valve